

Instruction for Updating DOSS SoundBox

***Important note: at first, you will need to extract bin files from the zip/rar file.**

You'll need a micro SD card (of 32GB or less capacity) to upload the firmware to the speaker.

1. Please copy and paste the .bin file onto the micro SD card as it is.
2. Please turn on the speaker and insert the micro SD card into the TF Card slot on the back of the speaker. The micro SD card goes in with the metal contacts side up.
3. The speaker should be updating the firmware automatically, and the speaker should turn itself off once the update is complete.

Please also note below issues:

1. Please follow the instruction step by step, otherwise the speaker would stop working;
2. Do not revise the file name, or it will not work;
3. If you want to use the card to play music, delete the upgrading file first;
4. Please use the 32G card or smaller, if your SD card capacity is over than 32G, please format that to FAT32 or FAT.

If any other we can help for you, please email our support team
support@dossav.com